


HAVUZ TEMİZLEME ROBOTU KULLANIM KILAVUZU

KABLOSUZ, HAVUZ TEMİZLEME ROBOTU

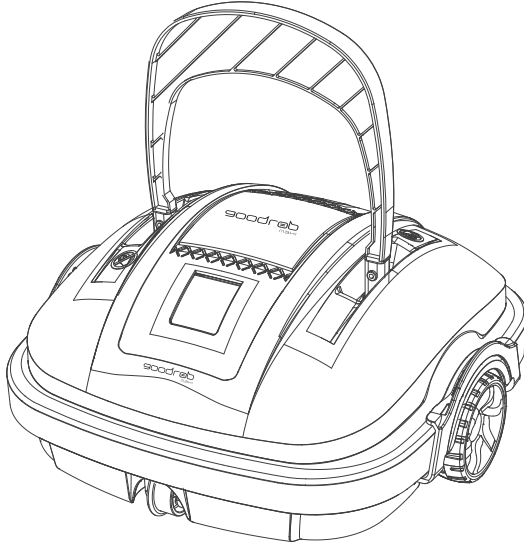

goodrebb
maxi

bir NETA markasıdır.
is a HAVUZ brand.



havuz temizleyicinizi çalıştırmadan önce kılavuzun tamamını okuyun ve bu kılavuzu referans olarak elinizin altında bulundurun.

Temizleyiciyi kullanmadan önce kılavuzu dikkatlice okuyun. Güvenliğiniz en önemli şeydir. Lütfen cihazı talimatlara göre okuyun ve çalıştırın, Neta Havuz yanlış kullanımdan kaynaklanan herhangi bir kayıp veya yaralanmadan sorumlu tutulamaz.

Uyarı

Cihazın uyarılara uygun olarak çalıştırılmaması ciddi yaralanmalara, elektrik çarpmasına veya ölüme neden olabilir.

- 1.Yalnızca NETA HAVUZ tarafından önerilen veya satılan aksesuarları kullanın.
- 2.Her temizlikten sonra şarj girişini kurulayın. Şarj soketinin nemli olması elektrik çarpmasına neden olabilir.
- 3.Temizleyici çalışırken (gösterge açıkken) şarj etmeyin.
- 4.Yalnızca Orijinal ve onaylı şarj cihazını kullanın. Bu şarj cihazıyla başka cihazları şarj etmekten kaçının. Yanlış kullanım aşırı ısınmaya veya bataryadan aşındırıcı sıvı sızıntısına neden olabilir.
- 5.Elektrik prizinin bir topraklama hatası devre kesicisi (GFCI) ve bir toprak kaçağı kesicisi (ELI) ile korunduğundan emin olun.
- 6.Herhangi bir elektrik çarpmasını önlemek için kablosu hasarlı bir şarj cihazı uygulamayın.
- 7.Şarj cihazını bağlamak için uzatma kablosu kullanmaya çalışmayın.
- 8.Çocukların süpürgeye binmesine veya onunla oyuncak gibi oynamasına asla izin vermeyin.
- 9.Çocuğun cihazı çalıştırmasına veya bakımını yapmasına izin vermeyin.
- 10.Temizleyici çalışırken havuza girmeyin.
- 11.Cihazı asla yanıcı ortamlara maruz bırakmayın veya şarj etmeyin.
- 12.Temizleyicinin sızdırmazlık parçalarını yalnızca lisanslı profesyoneller sökebilir.
- 13.Havuz filtresi çalışırken temizleyiciyi çalıştırmayın.

Dikkat

Cihazın uyarılara göre çalıştırılmaması, cihazın hasar görmesine veya kişisel hasara neden olabilir.

- 1.İlk kullanımdan önce üniteyi şarj edin.
- 2.Temizleyiciyi aşırı şarj etmeyin, bu pil ömrünü kısaltacaktır.
- 3.Optimum pil ömrünü korumak için temizleyiciyi uzun süre (6 aydan fazla) saklamadan önce şarj edin.
- 4.Her kullanımdan sonra filtre sepetini yıkamayı ve temizlemeyi unutmayın.
- 5.Temizleyiciyi serin ve havalandırılmış bir yerde, doğrudan güneş ışığından veya herhangi bir ısı kaynağından uzakta saklayın.
- 6.Havuz temizleyiciyi sadece aşağıdaki su koşullarında kullanın:

Klor	Max 4 PPM
pH	7.0 - 7.8 PPM
Sıcaklık	41 - 95 °F (5 - 35 °C)
NaCl	Maximum = 5000 PPM


ÖZELLİKLER

Model	Goodrob Maxi
Havuz Büyüklüğü	Up to 500 sq. Ft in-ground& above ground pools
Derinlik	Max. 8.2ft
Cihaz Boyutu	16.14 x 15.87 x 8.46 inches
Ağırlık	7.9lbs (3.7Kg)
Çalışma zamanı	50-60 min.
Şarj Süresi	3-4 hours
Gerilim	11.1V
Güç	30W
Şarj Cihazı Girişi	12.6V/1A
Batarya Kapasitesi	2600mAh
Filtre Yoğunluğu	180µm
DebiOranı	7.2m ³ /H
Hareket Hızı	16m/min.
Suya Dayanıklılık	IPX8

PAKET LİSTESİ

- 1 x Temizleyici
- 1 x Şarj Cihazı
- 1 x Flipper
- 2 x Sıyrıcılar
- 1 x Geri Alma Kancası
- 2 x Vida
- 1 x Kullanım Kılavuzu
- 1 x Hızlı Başlangıç Kılavuzu

ÜRÜN ŞEMASI

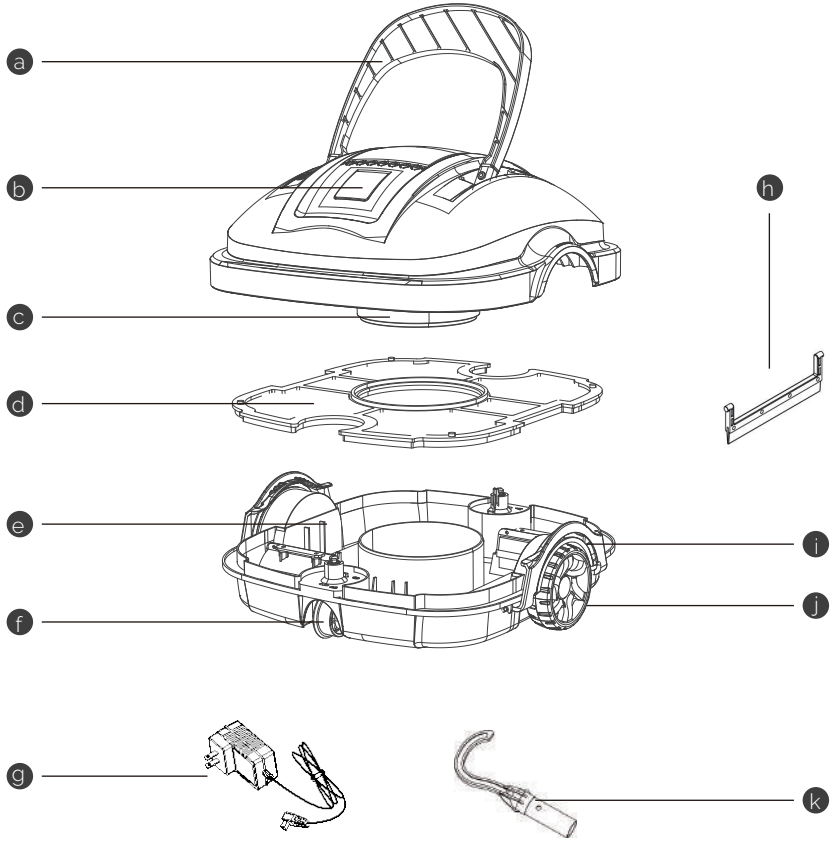

a Flipper & Sap

Cihaza vidalanmıştır. Taşıma ve cihazı onunla birlikte çıkarın

b Akış çıkışı

Hızlı su tahliyesi için cihazın üst kısmında iki akış çıkışı

c Mühürlü Parça

Önemli bileşenler burada mühürlenmiştir. Güvenliğiniz için, izniniz olmadan sökmeye çalışmayın

d Filtre Tepsisi

Emme işleminden sonra kir ve kalıntıları filtreleyin

e Depolama Boşluğu

Toplanan tüm çöpleri depolama

f Ön ve Arka Ayarlanabilir Tekerlek

İki ayar tekerleğini bir farklı temizleme modeli

g Şarj Cihazı

Temizleyiciyi tamamen şarj edin

h Kazıyıcı

Havuz zeminindeki kir ve kalıntıları süpürerek temizleyin

i Montaj Bağlantı Elemanı

Üst kapağı kasadan kilitleyin ve kilidini açın. Cihazın her iki yanında iki tane vardır


j Cihaz Tekerleği

Yerde çalışırken

k Kanca

Temizleyiciyi havuzdan çıkarın

Açma/Kapama
Düğmesi

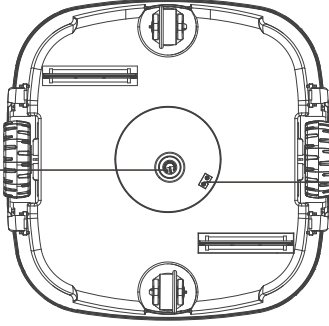

Şarj Portu

Not:



- Üst kapak kırıldığında cihazı çalıştırmayın.
- Sızdırmazlık parçasından herhangi bir sıvı sızıntısı varsa, cihazı şarj etmeyi veya çalıştırmayı durdurun.

BAŞLIYORUZ

Yeni Goodrob Maxi'nizi Montajlayın

kulpu'ı takın

Ürünle birlikte verilen kulpu ve iki vidayı çıkarın ve bir yıldız tornavida hazırlayın. Her iki taraftan ikiyeşer vida kullanarak kulpu sıkıca vidalayın.

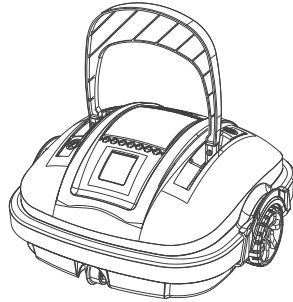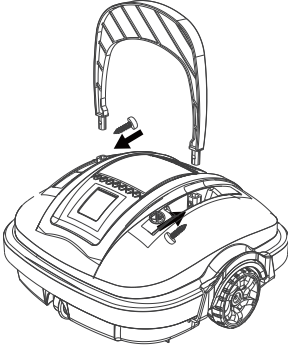


Not:

- Bu iki vidayı farklı yönlerde takmalısınız. Biri sol taraftan, diğeri sağ taraftan takılmalıdır.
- Parmağınızı kanat menteşesinin hareket ettiği boşluktan uzak tutun. Ani bir hareket yaralanmanıza neden olabilir.

Sıyıcıları Takın

Sıyıcıları vakum deliğine yerleştirin, deliğin çentiğine tam olarak yerleştirdikten sonra bir "klik" sesi duyabilirsiniz.

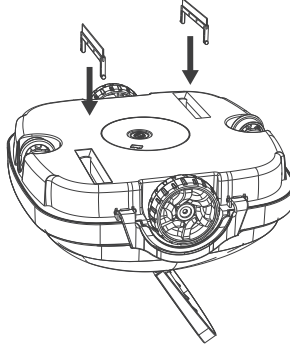


Not:

Sıyıcıları çöpleri ve kirleri temizlemek için takabilirsiniz. Havuz zemininiz çok düz değilse, küçük çıkıntılar veya çukurlar varsa, sıkışmasını önlemek için takmayabilirsiniz.

Yeni Goodrob Maxi'nizi Şarj Edin

Cihazın lityum iyon şarj edilebilir bir pili vardır ve ilk kullanımdan önce ve pil zayıfladığında pili şarj etmeniz gerekir.

Şarj portu cihazın alt kısmındadır.


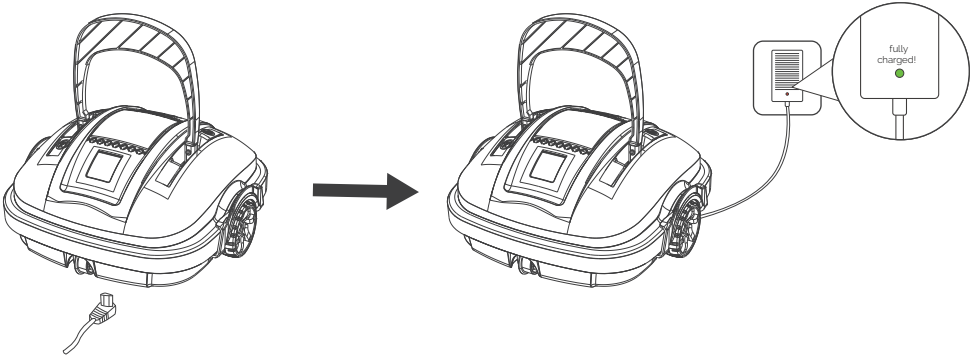


1. Önemli güvenliğiniz için, şarj etmeden önce cihazın gücünün açık ve şarj portunun kuru olduğunu iki kez kontrol etmeniz gerekir.
2. Yangın riskini azaltmak için, şarj ederken cihazınızı ve adaptörünüzü doğrudan güneş ışığından veya sudan uzak tutun.

Not:

1. Şarj ederken, cihazınızın havuz kenarından en az 3 m (yaklaşık 10 ft) uzakta olduğundan emin olmalısınız.
2. Şarj sırasında sıcaklık 32° (90°) ile 95° (35°) arasında ve bağıl nem oranı %5 ile %95 arasında olmalıdır.


Kulpu ilk kullanımdan sonra taktıysanız, konektörü yerleştirdikten sonra alt kısmını zeminde tutmalısınız. Aksi takdirde kapak kırılabilir.

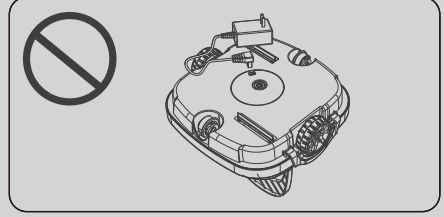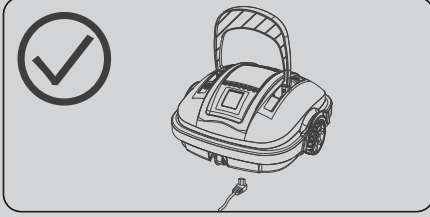


Adaptörün bir göstergesi vardır, pilin dolu olup olmadığını anlamak için yeşil ışık ve kırmızı ışık gösterecektir.

Renk	Gösterge
●	Şarj işlemi Devam Ediyor
●	Pil dolu


Yeni Goodrob Maxi'nizi Çalıştırın

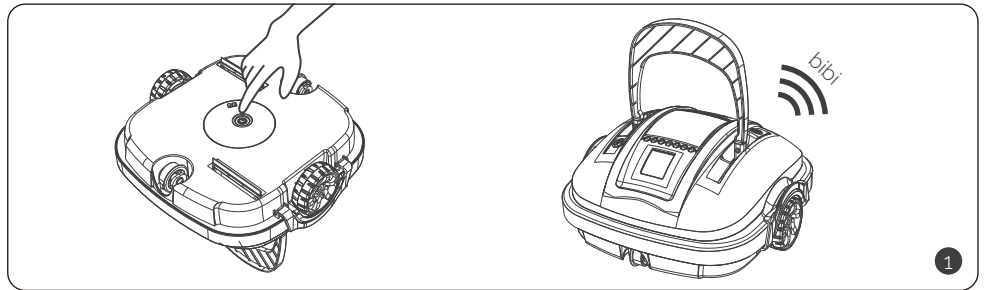

Cihazı açın ve cihazdan bip sesi duyacaksınız, bu da suya dalmaya hazır olduğu anlamına gelir. Cihaz suyun dışında kaldığında sürekli olarak bip sesi çıkaracaktır.

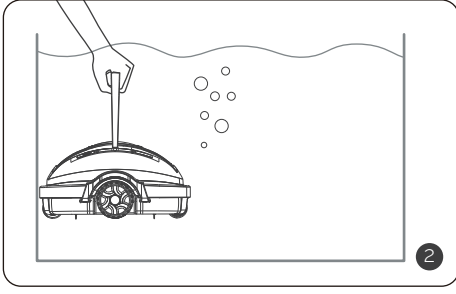


Kolu tutun ve havuza dikey olarak yerleştirin ve cihazı tamamen daldırın. Bip sesi duracaktır.

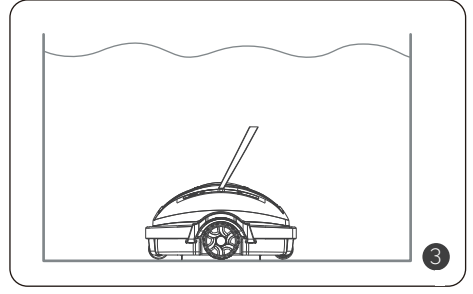


Kabarcık kalmadığında, cihazın serbestçe zemine inmesine izin verin.

Not:


Optimum temizlik performansı elde etmek için, havuzun su derinliğinin cihazın üst kısmından en az 19,5 inç (50 cm) yüksekte olduğundan emin olmalısınız.

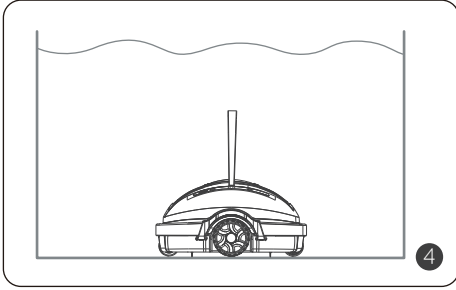

Zemin üzerinde yaklaşık 12 saniye boyunca statik kalırsa, temizleyici temizlemeye hazırdır.

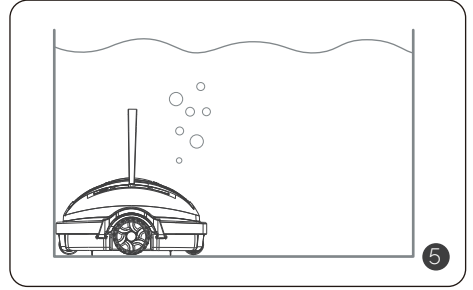

Temizleme işlemi bittiğinde veya pil zayıfladığında cihaz otomatik olarak en yakın duvarın kenarında durmak üzere hareket edecektir.

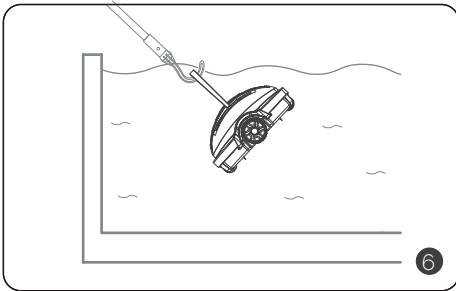


Ürünle birlikte verilen kancayı robotun kulpuna takabilir ve robotu havuzdan çıkarabilirsiniz.

Not:

İçindeki suyu hızlı bir şekilde boşaltmak için temizleyiciyi dikey olarak çıkarmalısınız. Cihazı kapatmak için on/off düğmesine basın.


FİLTRE TEMİZLİĞİNİ YAPIN

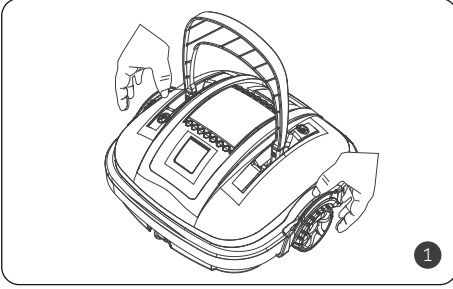


Not:

- Üst kapağı açarken cihazın gücünün kapalı olduğundan emin olmalısınız.
- Filtre sepetini kurutmadan önce temizlemeniz gerekir.

Kapak bağlantı elemanlarını tutun ve kilitlerini açın.

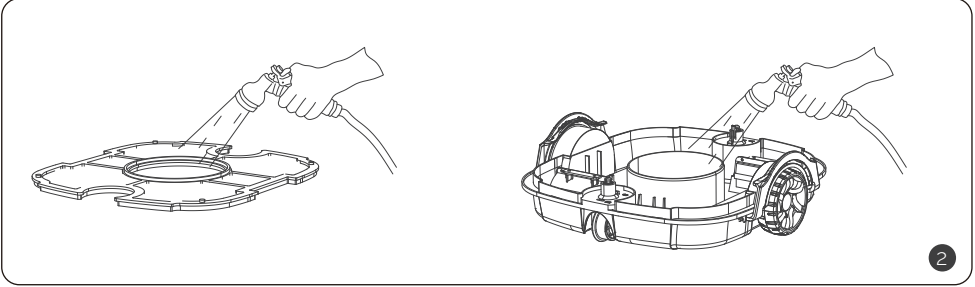

Filtre tepsisini çıkarın. Tüm kalıntıları silkeleyin ve temiz suyla durulayın. Daha iyi bir temizlik için yumuşak sabunlu su da kullanabilirsiniz.

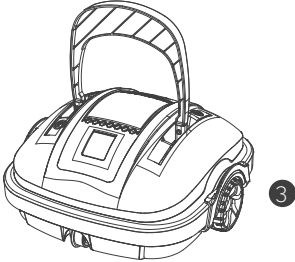

Not:

Ağın köşelerinde dört çıkıntı olan taraf yukarı yerleştirilmelidir.

Duruladıktan sonra filtre tepsisini temizleyiciye geri koyun ve kapağı sabitleyin.

Not:


- Temizleyicinin içindeki elektrikli bileşenler nedeniyle, temizleyiciyi serin ve havalandırılan bir yerde, doğrudan güneş ışığından veya herhangi bir ısı kaynağından uzakta saklayın.
- Optimum pil ömrünü korumak için temizleyiciyi uzun süre (6 aydan fazla) saklamadan önce şarj edin.

TEMİZLİK DÜZENİNİZİ NASIL AYARLAYABİLİRSİNİZ?

Havuz şekliniz düzensizse veya varsayılan temizleme modelinden memnun değilseniz, daha iyi bir temizlik elde etmek için ayarlanabilir tekerleklerin yönünü değiştirebilirsiniz.


Ayarlanabilir tekerlekleri çıkarın

Gövdenin ön ve arka tarafında A, B, C ve D işaretlerinin bulunduğu iki tekerlek kiti görebilirsiniz. Tekerlek gövdesinde, içine yerleştirilmiş bir mandal görebilirsiniz. Bu mandalı tutup iç tarafa doğru itebilirsiniz ve ardından tekerlek kiti çıkarılabilir.

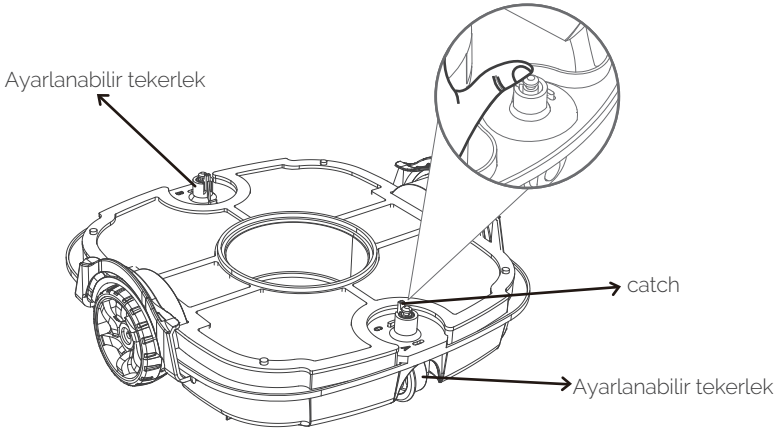

Kombinasyon yolunu sıfırla


Temizleme yolunuzu değiştirmek için tekerlek kiti üzerindeki sınırlama kolunu A/B/C/D işaretli deliklere yerleştirin.

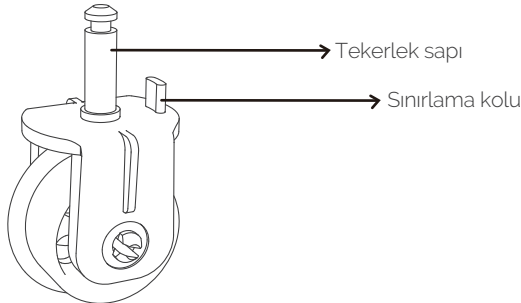

Aşağıda ayarlanabilir tekerleklerin kombinasyon yolları ve kullanım senaryoları yer almaktadır, buna başvurabilirsiniz

Kombinasyon	Kullanım Senaryosu
A – C	Varsayılan (çoğu havuza uygun)
B – C	*A - C* ile karşılaştırıldığında daha küçük toparlanma açısı
A – B	Yuvarlak şekilli havuzlar için

Örneğin: B-A kombinasyonu

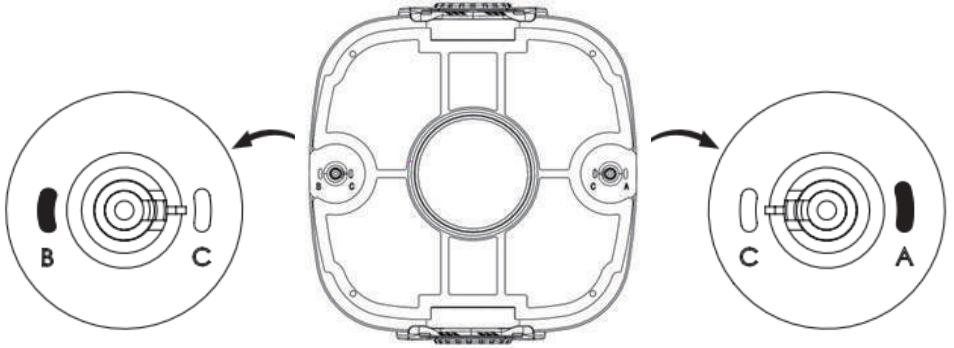

CİHAZINIZIN BAKIMI NASIL YAPILIR

İyi performansı korumak için temizleyicinizi saklama adımlarını izlemelisiniz.

a.Cihazın gücünün açık olduğundan emin olun

b.Temizleyiciyi ve filtre sepetini kurulaşın

c.Aküyü tamamen şarj edin

d.Temizleyiciyi serin ve havalandırılmış bir yerde, doğrudan güneş ışığından, ısı kaynağından ve dondan uzakta, ortam sıcaklığı 5°C/ 41°F ile 45°C/ 113°F arasında olacak şekilde saklayın.

e.Optimum pil ömrü sağlamak için temizleyiciyi her üç ayda bir şarj edin.

Not:

Cihazınız uzun süreli düşük pil ömründen sonra veya çalışmazsa, lütfen yardım için satış sonrası ekibiyle iletişime geçin. Güvenliğiniz için, yetkiniz olmadan sökmeye çalışmayın.

SSS & SORUN GIDERME

S: Bu temizleyici duvar ve su hattı temizliği yapabilir mi?

C: Bu temizleyici sadece zemin temizliği için tasarlanmıştır. Herhangi bir duvar veya su hattı temizliğini desteklemez.

S: Yüzme havuzundaki basamaklar, sığ su alanları, giderler, eğimler vb. gibi engeller çalışmayı etkiler mi?

C: Makine düz zeminde çalışmayı tercih eder. Yüksek engeller cihazın sıkışmasına neden olur.

Temizleyiciyi kullanırken aşağıdaki durumlarla karşılaşırsanız, tabloyu kontrol edebilir ve bunları kendiniz çözebilirsiniz.

Not: Tablodan bir çözüm bulamazsanız, lütfen satış sonrası ekibiyle iletişime geçin.

Belirti	Olası neden	Çözüm
Güç açıldıktan sonra sesli uyarı sessiz veya pervane dönmüyor.	Olası neden	Aküyü yeniden şarj edin
	Dahili arıza	Satış sonrası servisle iletişime geçin
Güç açıldıktan sonra sesli uyarı yok veya pervane dönmüyor.	Salıncak plakası sıkışmış	Süpürgeyi havuzdan çıkarın ve döner plakayı manuel olarak döndürmeye çalışın veya satış sonrası servisle iletişime geçin.
	Süpürge duvara temas ettiğinde döner plaka duramaz	Sıkışma durumunu manuel olarak düzeltmeye çalışın
Süpürge duvara temas ettiğinde döner plaka durabilir, ancak süpürge geri gidemez.	Su kanalı sıkışmış	Takılma durumunun elle giderilmesini deneyin
Şarj cihazı göstergesi çalışmıyor.	Şarj cihazı hasar görmüş	Satış sonrası servisle iletişime geçin
Temizleyici, zemin için tam bir kapsama alanına sahip değildir.	Uygun olmayan tekerlek açısı	Tekerlek konumunu ayarlayın
	Özel havuz şekli	Tekerlek konumunu ayarlayın
	Yüzme havuzu su sirkülasyon sistemi açık	Sistemi kapatın

goodrob

maxi

Goodrob Daha İyi Süpürür!



NETA HAVUZ

Manufacturer of pool equipments in Turkey
netahavuz.com

@/neta-havuz

@/neta.pool

f/NetaHavuzTürkiye


in/netahavuz

yt/NetaHavuzTurkey



ROBOTIC POOL CLEANER USER MANUAL

CORDLESS, ROBOTIC POOL CLEANER

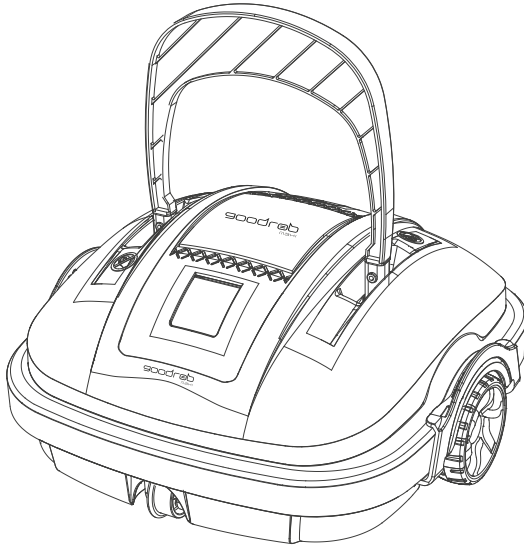

goodreb
maxi

bir NETA markasıdır.
is a HAVUZ brand.



Read through the entire manual before running your new robotic pool cleaner,
and keep this manual handy for your reference.

Read the manual carefully before you use the cleaner. Your safety is the most important thing. Please read through and operate the device as per instructions, Polarbots is not held liable for any loss or injury caused by improper use.

Warning

Failure to operate the device as per the warnings can result in serious injury, electrocution or death.

- 1. Use only the accessories recommended or sold by Polarbots.
- 2. Dry the charging port after each cleaning. Humidity charging socket may cause a electric shock.
- 3. Do not charge the cleaner when it is running (the indicator is on).
- 4. Use only the original and authorized power charger. Avoid charging any other devices with this charger. Improper use may result in overheating or corrosive liquid leakage from the battery.
- 5. Make sure the electrical outlet is protected by a ground fault circuit interrupter (GFCI) and an earth leakage interrupter (ELI).
- 6. Do not use a cord-damaged charger to avoid any electrical shock.
- 7. Do not try to use extension cord to connect the charger.
- 8. Never allow children to ride on the cleaner or play with it as a toy.
- 9. Do not allow child to operate or maintain the device.
- 10. Do not enter the pool when the cleaner is working in it.
- 11. Never expose or charge the device in flammable environments.
- 12. Only licensed professionals can disassemble the sealing parts of the cleaner.
- 13. Do not operate the cleaner while pool filter is running.

Caution

Failure to operate the device as per the warnings can cause a damage to the device or personal damage.

- 1. Charge the unit before first use.
- 2. Do not over charge the cleaner, which will reduce the battery life.
- 3. Charge the cleaner prior to being stored for a long time (over 6 months) to main tain an optimal battery life.
- 4. Remember to wash and clean the filter basket after each use.
- 5. Store the cleaner in a cool and ventilated place, away from direct sunshine or any heat source.
- 6. Use only the pool cleaner in the following water conditions:

Chlorine	Max 4 PPM
pH	7.0 - 7.8 PPM
Temperature	41 - 95 °F (5 - 35 °C)
NaCl	Maximum = 5000 PPM


SPECIFICATIONS

Model	Goodrob Maxi
Pool Size	Up to 500 sq. Ft in-ground& above ground pools
Depth	Max. 8.2ft
Device Dimension	16.14 x 15.87 x 8.46 inches
Weight	7.9lbs (3.7Kg)
Runtime	50-60 min.
Charging Time	3-4 hours
Voltage	11.1V
Power	30W
Charger Input	12.6V/1A
Battery Capacity	2600mAh
Filter Density	180µm
Flow Rate	7.2m ³ /H
Moving Speed	16m/min.
Water Resistance	IPX8

PACKING LIST

- 1 x Cleaner
- 1 x Retrieving Hook
- 1 x Charger
- 2 x Screws
- 1 x Flipper
- 1 x User manual
- 2 x Scrapers
- 1 x Quick Start Guide

PRODUCT DIAGRAM

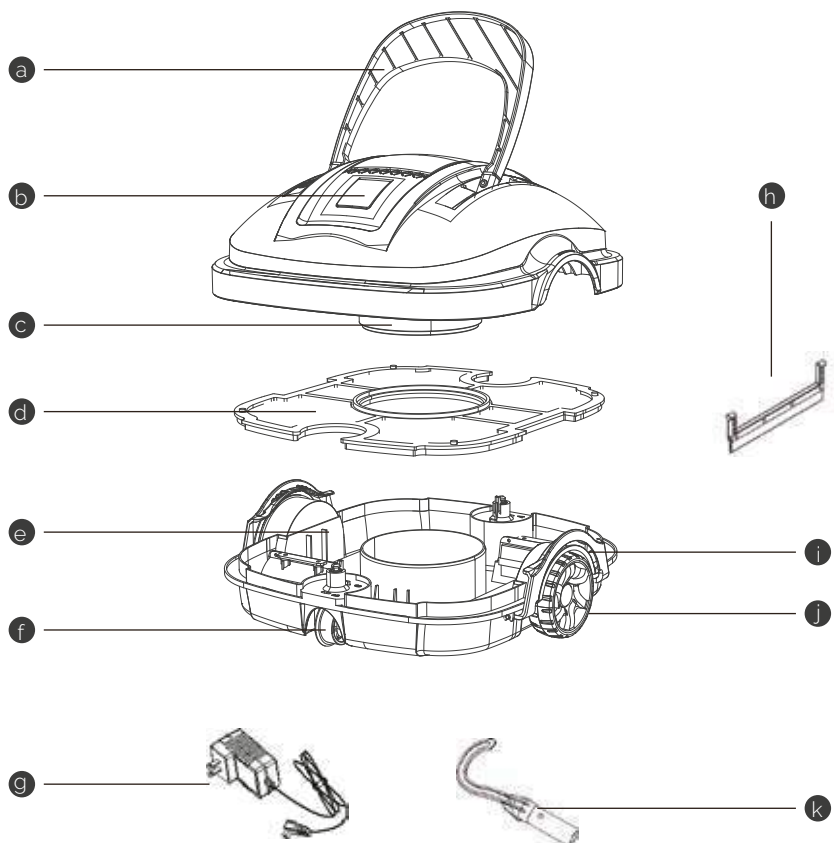

a Flipper & Handle

Screwed to the device. Transport and remove the device with it

b Flow outlet

Two flow outlets on the top of the device for a quick water release

c Sealed part

Important components are sealed there. For your safety, do not try to disassemble it without authorization

d Filter Tray

Filter dirt and debris after suction

e Storage cavity

Store all collected debris

f Front and Rear Adjustable Wheel

Adjust two adjust wheels to run in a different cleaning pattern

g Charger

Fully charge the cleaner

h Scraper

Wipe out the dirt and debris from the pool floor

Assembly fastener

Lock and unlock the top cover from the chassis. There are two on either side of the device


Device Wheel

Running on the flat floor

k Hook

Remove the cleaner from the pool

On/Off Button

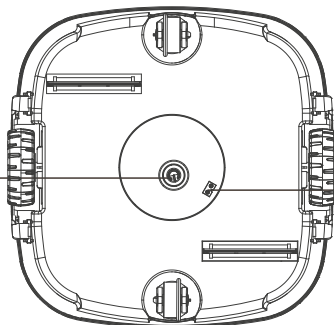

Charging Port

Note:



- Do not operate the device when the top cover is broken.
- If there is any liquid leakage from the sealing part, stop charging or running the device.

GET STARTED

Assemble your new Goodrob Maxi

Install flipper

Take out of the included flipper and two screws and prepare a Phillips head screwdriver. Screw tightly the flipper using two screws from either side.

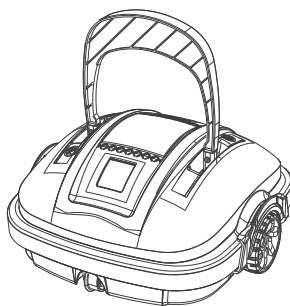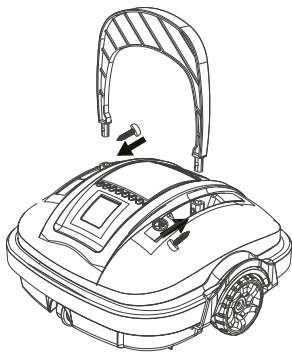


Note:

- You should insert these two screws in a different directions. One should be inserted from left side, and the other from right side.
- Keep your finger away from the flipper hinge moving cavity. A sudden movement may cause you injury.

Install scrapers

Insert the scrapers into the suction opening, you can hear a "click" after a full insertion into the notched of the opening.

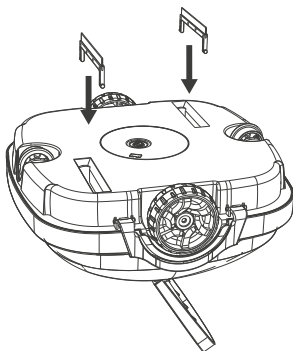


Note:

You can install the scrapers to knock loose debris and dirt. If your pool floor is not so flat, with tiny protrusions or pits, you may not install it to prevent it from being stuck.

Charge your new Goodrob Maxi

The device has a lithium-ion rechargeable battery, and you need to charge the battery before first use and when the battery is low.

The charging port is on the bottom of the device.


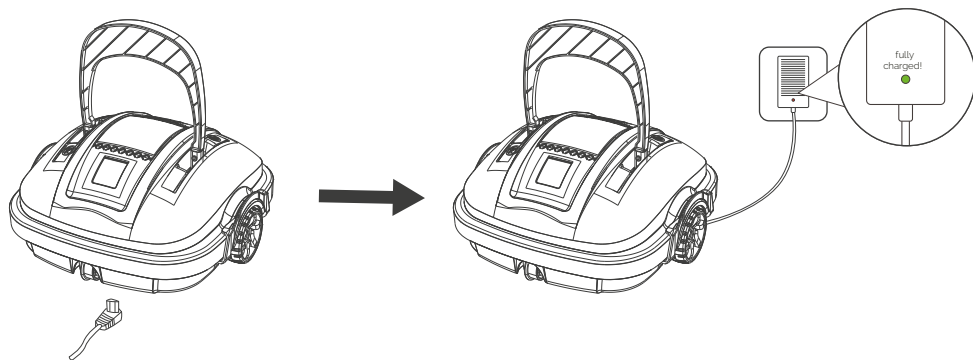


1. For your important safety, you need to double check the device is powered off and charging port is dry before charging.
2. For reducing fire risk, keep your device and adaptor away from direct sunshine or water when charging.

Note:

1. When charging ,you should ensure your device at least 3m (appr. 10ft) away from the edge of the pool.
2. The temperature should be at between 32°(90°) and 95° (35°) with RH between 5% and 95% when charging.


If you have installed the flipper after first use, you should keep the bottom onthe floor after inserting the connector. Otherwise, the flipper may be broken.

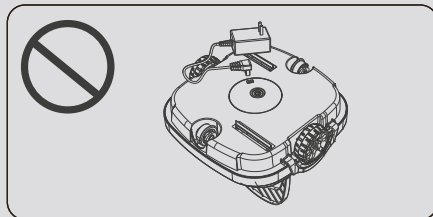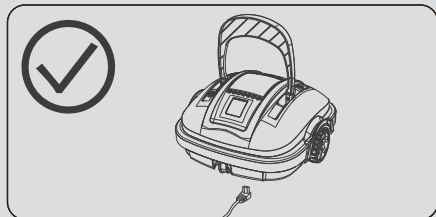


The adaptor has an indicator, it will display green light and red light to tell battery is full or not.

Color	Indication
	Charging in Progress
	Battery is full


Run your new Goodrob Maxi

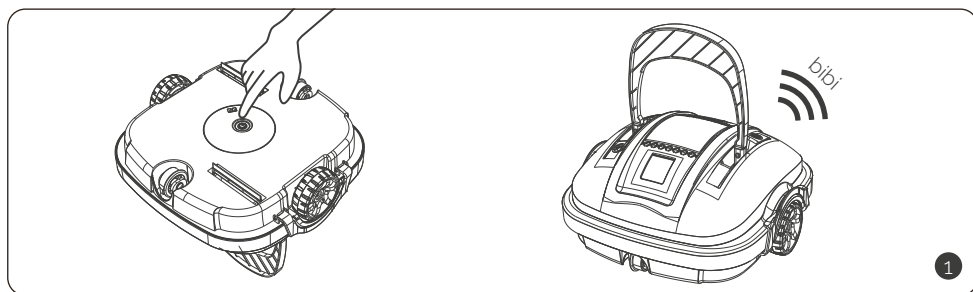

Turn on the device, and you can hear beep sound from the device, which means it is ready to submerge. The device will beep continuously when staying out of water.

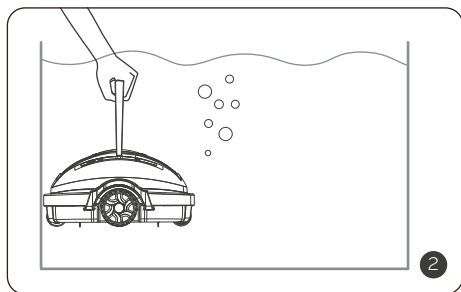


Hold the handle and put it vertically into the pool and fully submerge the device. The beep will stop.

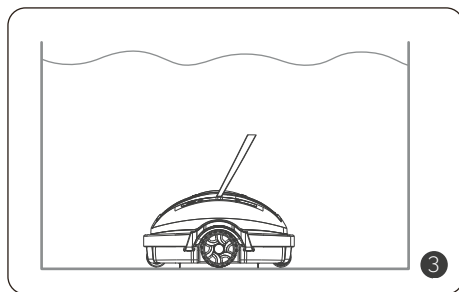


When there is no bubble out, let the device go down to the floor freely.

Note:


To achieve an optimal cleaning performance, you should ensure the water depth of the pool is at least 19.5 in (50 cm) high from the top of the device.

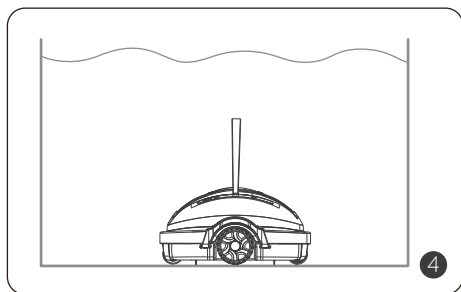

About 12 seconds static on the floor, the cleaner is ready to clean.

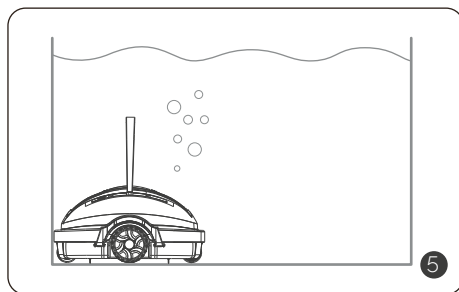

The device will automatically move to stop by the edge of its nearest wall when finishing cleaning or battery low.

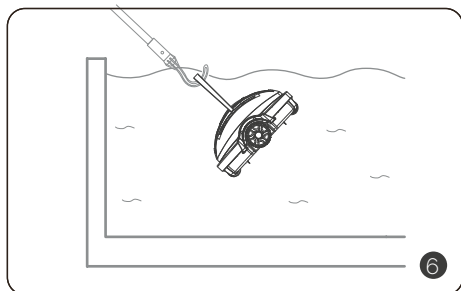


You can insert the included hook into a pool pole and lift the cleaner out of the pool.

Note:

You should take the cleaner out vertically to drain inside water out quickly. Press on/off button to turn off the device.



DO A FILTER CLEANING

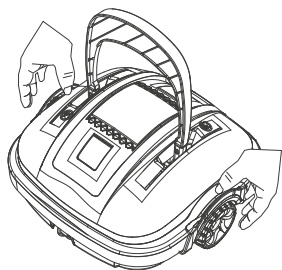


Hold the cover fasteners and unlock them.

Note:

- You should ensure the device is power off when opening the top cover.
- You need to clean the filter basket before being dry.

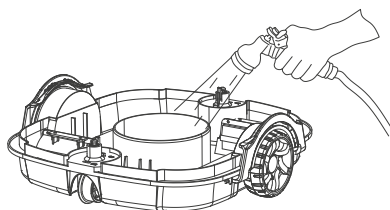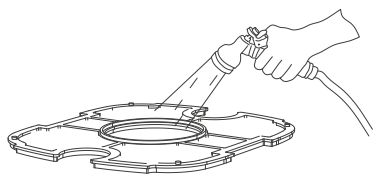

Take out the filter tray. Shake off all debris and rinse it with clean water. You can also use soft soapy water to keep a better clean.

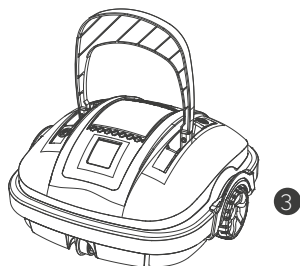

Note:

The side with four protrusion in the corners of the mesh should be placed up.

After rinsing, put the filter tray back into the cleaner and fasten the cover.

Note:


- As electric components inside the cleaner, store the cleaner in a cool and ventilated place, away from direct sunshine or any heat source.
- Charge the cleaner prior to being stored for a long time (over 6 months) to maintain an optimal battery life.

HOW TO ADJUST YOUR CLEANING PATTERN

If your pool shape is irregular or you are not satisfied with default cleaning pattern, you can change the direction of the adjustable wheels to have a better cleaning work.


Detach the adjustable wheels

you can see two wheel kits where marking A, B, C, and D on front and rear side of the chassis . On the wheel stem, you can see a catch inserted in. You can hold that catch and push to the inner side, and then the wheel kit can be removed.

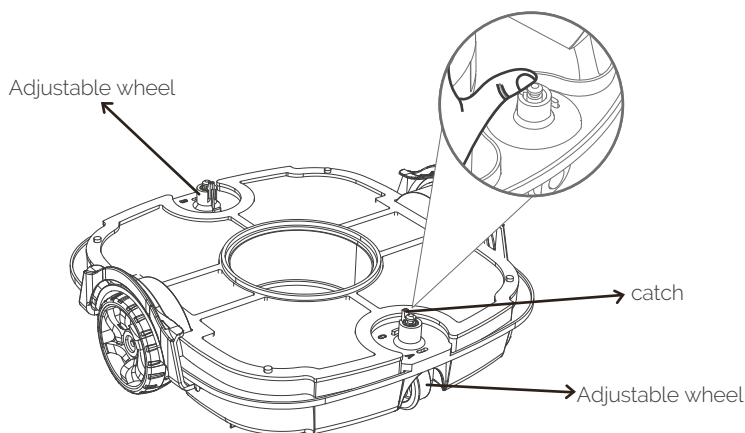

Reset combination path


Insert the limiting lever on the wheel kit into holes marking A/B/C/D to modify your cleaning path.

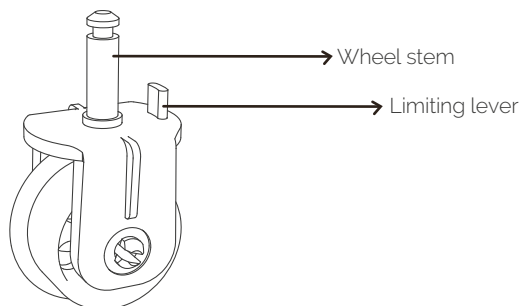

Below is the combination ways and their usage scenario of adjustable wheels, you can refer to it.

Combination	Use Scenario
A – C	Default (suitable to most pools)
B – C	Smaller rebounding angle comparing with "A – C"
A – B	For round shape pools

For example: combination B-A

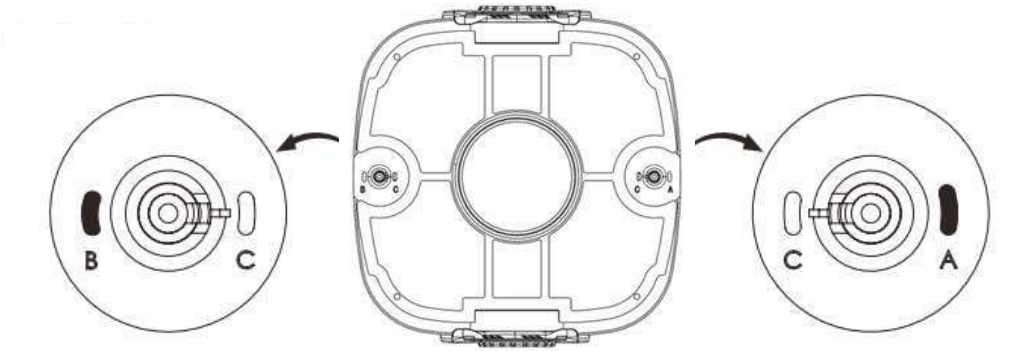

HOW TO MAINTAIN YOUR DEVICE

You should follow the steps to store your cleaner to maintain good performance.

- a. Ensure the device is power off
- b. Dry out the cleaner and filter basket
- c. Fully charge the battery
- d. Store the cleaner in a cool and ventilated place, away from direct sunshine, heat source, frost with an ambient temperature at between 5°C/ 41°F and 45°C / 113°F
- e. Charge the cleaner every three months to ensure an optimal battery life.

Note:

If your device do not work after a long-term low battery life or being off, please contact after-sale team for help. For your safety, do not try to disassemble it without authorization.

FAQ & TROUBLE SHOOTING

Q: Could this cleaner do wall and waterline cleaning?

A: This cleaner is designed for floor cleaning only. It does not support any wall or waterline cleaning.

Q: Will obstacles such as steps, shallow water areas, drains, slopes etc. in the swimming pool affect the running?

A: The machine prefers to run on flat floor. High obstacles will make the device stuck.

If you encounter the following situations when using the cleaner, you can check the table and solve them by yourself.

Note: If you can not find a solution from the table, please contact after-sale team.

symptom	Possible reason	Solution
Buzzer silent or impeller not rotating after power on	Possible reason	Recharge the battery
	Internal fault	Contact after-sales service
The buzzer still alarms or the impeller does not rotate after the cleaner is fully immersed in the water.	The swing plate is stuck	Remove the cleaner from the pool and try to manually rotate the swing plate or contact the after-sales service.
	The swing plate cannot stand when the cleaner touching the wall	Try to manually overcome stuck condition
The swing plate cannot stand when the cleaner touching the wall, but the cleaner cannot reverse	The water channel is stuck	Try to manually overcome stuck condition
Charger indicator does not work	The charger is damaged	Contact after-sales service
The cleaner does not have a full coverage for the floor	Improper wheel angle	Adjust wheel position
	Special pool shape	Adjust wheel position
	Swimming pool water circulation system is on	Shut down the system

goodreb

maxi

Sweeps Better



**NETA
HAVUZ**

Manufacturer of pool equipments in Turkey
netahavuz.com

@/neta-havuz

@/neta.pool

f/NetaHavuzTürkiye

in/netahavuz

y/NetaHavuzTurkey