




HAVUZ TEMİZLEME ROBOTU KULLANIM KILAVUZU

KABLOSUZ, HAVUZ TEMİZLEME ROBOTU

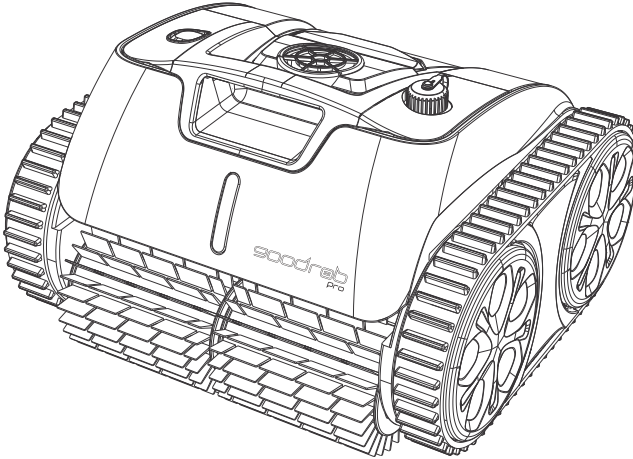

goodreb
Pro

bir NETA markasıdır.
is a HAVUZ brand.



Kablosuz havuz süpürgezinizi çalıştırmadan önce kılavuzun tamamını okuyun ve bu kılavuzu referans olarak elinizin altında bulundurun.

Temizleyiciyi kullanmadan önce kılavuzu dikkatlice okuyun. Güvenliğiniz en önemli şeydir. Lütfen cihazı talimatlara göre okuyun ve çalıştırın, yanlış kullanımdan kaynaklanan herhangi bir kayıp veya yaralanmadan sorumlu tutulamaz.

Uyarı

Cihazın uyarılara uygun olarak çalıştırılmaması ciddi yaralanmalara, elektrik çarpmasına veya ölüme neden olabilir.

- 1.Yalnızca NETA HAVUZ tarafından önerilen veya satılan aksesuarları kullanın.
- 2.Her temizlikten sonra şarj girişini kurulayın. Şarj soketinin nemli olması elektrik çarpmasına sebep olabilir.
- 3.Temizleyici çalışırken (gösterge açıkken) şarj etmeyin.
- 4.Yalnızca orijinal ve yetkili şarj cihazını kullanın. Bu şarj cihazıyla başka cihazları şarj etmekten kaçının. Yanlış kullanım aşırı ısınmaya veya bataryadan aşındırıcı sıvı sızıntısına neden olabilir.
- 5.Elektrik prizinin bir topraklama hatası devre kesicisi (GFCI) ve bir toprak kaçağı kesicisi (ELI) ile korunduğundan emin olun.
- 6.Herhangi bir elektrik çarpmasını önlemek için kablosu hasarlı bir şarj cihazı kullanmayın.
- 7.Şarj cihazını bağlamak için uzatma kablosu kullanmaya çalışmayın.
- 8.Çocukların süpürgeye binmesine veya onunla oyuncak gibi oynamasına asla izin vermeyin.
- 9.Çocuğun cihazı çalıştırmasına veya bakımını yapmasına izin vermeyin.
- 10.Temizleyici çalışırken havuza girmeyin.
- 11.Cihazı asla yanıcı ortamlara maruz bırakmayın veya şarj etmeyin.
- 12.Temizleyicinin sızdırmazlık parçalarını yalnızca lisanslı profesyoneller sökebilir.

Dikkat


Cihazın uyarılara göre çalıştırılmaması, cihazın hasar görmesine veya kişisel hasara neden olabilir.

- 1.İlk kullanımdan önce üniteyi şarj edin.
- 2.Temizleyiciyi aşırı şarj etmeyin, bu pil ömrünü kısaltacaktır.
- 3.Optimum pil ömrünü korumak için temizleyiciyi uzun süre (6 aydan fazla) saklamadan önce şarj edin.
- 4.Her kullanımdan sonra filtre sepetini yıkamayı ve temizlemeyi unutmayın.
- 5.Temizleyiciyi serin ve havalandırılmış bir yerde, doğrudan güneş ışığından veya herhangi bir ısı kaynağından uzakta saklayın.
- 6.Havuz temizleyiciyi sadece aşağıdaki su koşullarında kullanın:

Klor	Max 4 PPM
pH	7.0 - 7.8 PPM
Sıcaklık	41 - 95 °F (5 - 35 °C)
NaCl	Maximum = 5000 PPM


BİR BAKIŞTA GÖRÜNÜM

Ürün Harici Genel Bakış

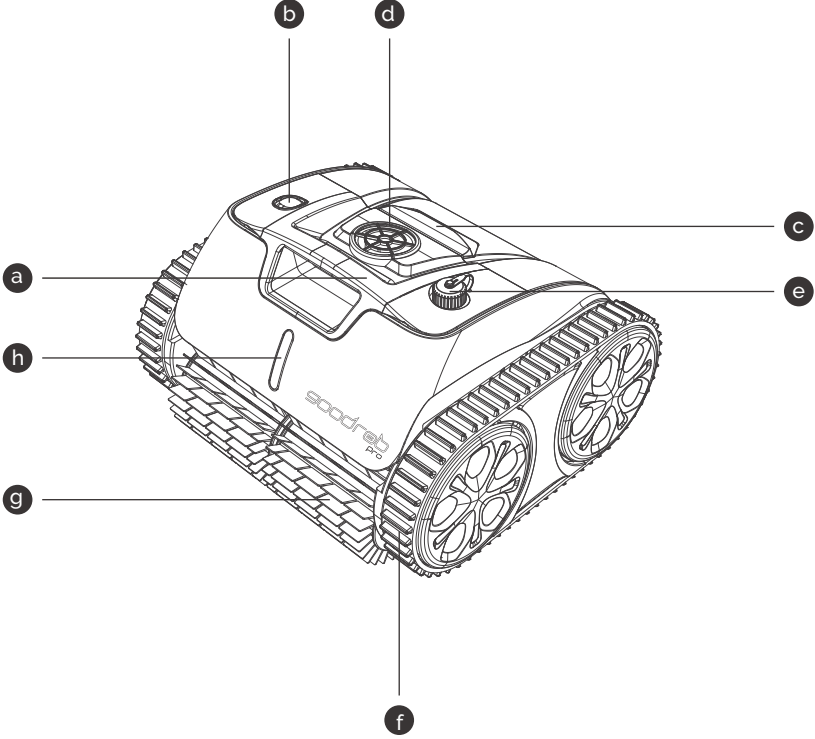

- a** Tutamak
Cihazı çıkarın ve onunla birlikte taşıyın
- b** Aç/Kapat Düğmesi
Cihazı açma/ kapatma
- c** Filtre Kapağı Kolu
Tutun ve kapağı açmak için kenarına bastırın
- d** Pompa
Kalıntıları emer ve suyu pencereden dışarı pompalar
- e** Şarj Bağlantı Noktası
Şarj cihazını bağlayın
- f** Parça
Cihazın duvarlara ve çeşitli engellere tırmanma kabiliyetini artırın
- g** Ovma Fırçası
Tüm kirleri dökün ve hepsini cihazın içine yuvarlayın
- h** LED Gösterge
Cihaz durumunu göstermek için farklı ışık renkleri

Ürün İç Genel Bakış

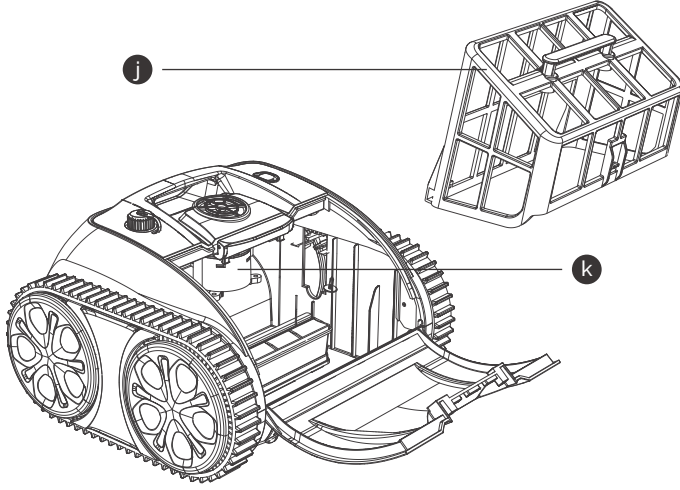

j Filtre Sepeti

Toplanan kir ve döküntüleri saklayın, her kullanımdan sonra yıkanması gerekir.





k Mühürlü Parça

Önemli bileşenler burada mühürlenmiştir. Güvenliğiniz için, izniniz olmadan sökmeye çalışmayın.

Üst kapak veya ovma fırçaları kırıldığında cihazı çalıştırmayın.

Sızdırmazlık parçasından herhangi bir sıvı sızıntısı varsa, cihazı şarj etmeyi veya çalıştırmayı durdurun.


Paket Listesi

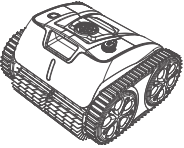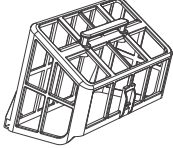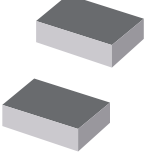			
Cihaz x 1	Denge Ağırlığı x 2	Filtre Sepeti x 1	Yapışkanlı Yüzer Blok x 2
			
Kullanım Kılavuzu x 1	Hızlı Başlangıç Kılavuzu x 1	Şarj Cihazı x 1	Kanca x 1

BAŞYALIN

Yeni Goodrob Pro'nuzu şarj edin

Cihaz lityum iyon şarj edilebilir bir pile sahiptir ve ilk kullanımdan önce ve pil zayıfladığında pili şarj etmeniz gerekir. Ürünle birlikte verilen kablo ve adaptörü kullanarak cihazınızı bir elektrik prizine bağlayın.

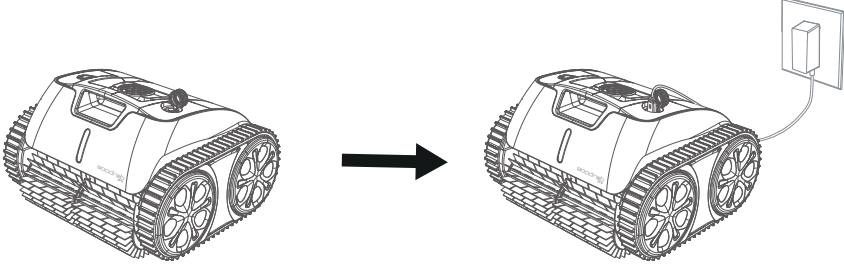

- Önemli güvenliğiniz için, şarj etmeden önce cihazın gücünün açık ve şarj soketinin kuru olduğunu iki kez kontrol etmeniz gerekir.
- Yangın riskini azaltmak için, şarj ederken cihazınızı ve adaptörünüzü doğrudan güneş ışığından veya sudan uzak tutun.

Not:

1. Şarj ederken, cihazınızın havuz kenarından en az 3 m (yaklaşık 10 ft) uzakta olduğundan emin olmalısınız.
2. En iyi şarj ortamı 32 °F -95 °F (0 °C -35 °C) sıcaklık, %5-%95 bağıl nemdir.


Adaptörün bir göstergesi vardır, pilin dolu olup olmadığını size söylemek için yeşil ışık ve kırmızı ışık gösterecektir.




Renk	Gösterge
● Şarj oluyor	Şarj İşlemi Devam Ediyor
● Şarjı tamamlandı	Batarya Dolu

Yeni Goodrob Pro'nuzu kurun

Cihazı on/off düğmesine basarak açabilirsiniz. Cihaz açık olduğunda ön taraftaki LED gösterge sabit mavi renkte yanacaktır. ●

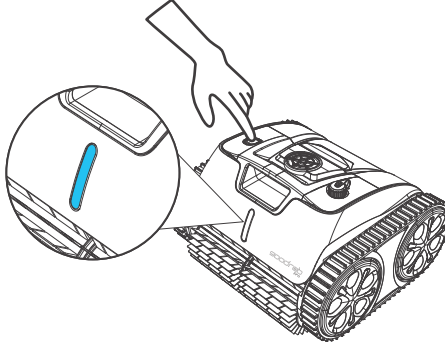

Aşağıda LED ışıklarının göstergesi yer almaktadır, farklı cihaz durumlarını öğrenmek için başvurabilirsiniz.

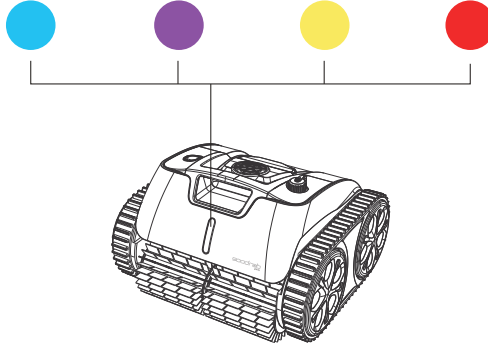


LED Işık	Gösterge	Durum
●	Solid	Güç Açık
	Yanıp sönüyor	Çalışma altında
●	Katı	Uygulamaya Bağlanma
●	Yanıp sönüyor	Düşük pil veya havuzda kendi kendine park etme
	Yanıp sönüyor	Kendi kendine park etme
●	yanıp sönen	Tamamlama Arızası

Not:


1. Sarı ışık yanıp söndüğünde, cihazınızı sudan çıkarmalı ve şarj etmelisiniz.
2. Kırmızı LED ışığı yanıyorsa, bu kılavuzdaki sorun giderme bölümünden çözüm bulabilir veya servis çağırabilirsiniz.

Yeni Goodrob Pro'nuzu çalıştırın


Cihazı açın, temizleyicinin sapını tutun ve havuza dikey olarak yerleştirin.

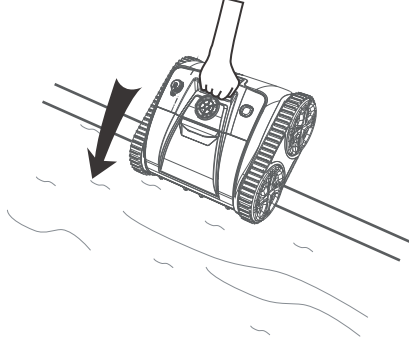


İçindeki sıkışmış havayı boşaltmak için tabana kadar inmesine izin verin

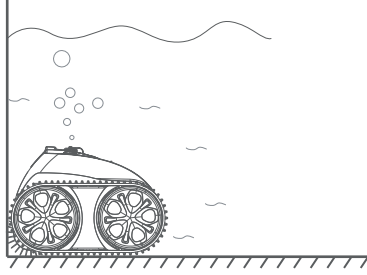**Not:**


Optimum temizlik performansı elde etmek için, havuzun su derinliğinin cihazın üstünden en az 19,5 inç (50 cm) yüksekte olduğundan emin olmalısınız.

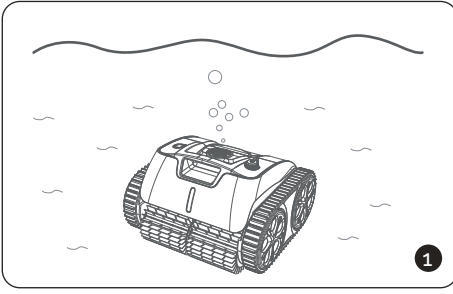


Yaklaşık 20 saniye otomatik kalibrasyon açık kapıyı açtığınızda, gösterge ışığı yanıp sönen maviye dönecektir. Temizleyici temizlemeye hazırdır.

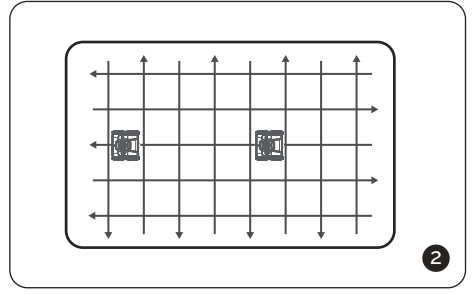


Temizleyici duvarları, zemini ve su hattını varsayılan olarak veya sizin ayarladığınız şekilde temizlemeye başlar.

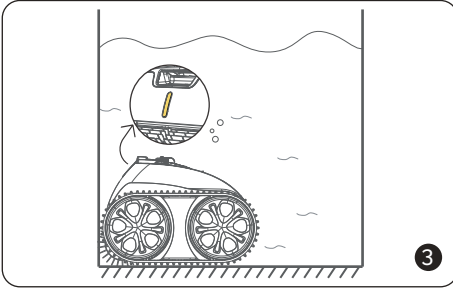

Temizlik bittiğinde veya pil zayıfladığında cihaz otomatik olarak duvar kenarında durmak üzere hareket edecektir.

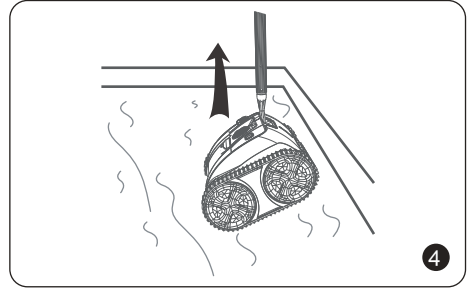



Ürünle birlikte verilen kancayı bir havuz çubuğuna takabilir ve temizleyiciyi havuzdan kaldırabilirsiniz.

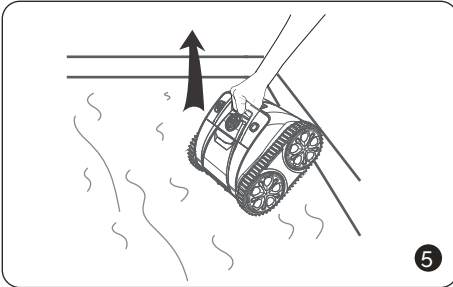

İçindeki suyu hızlı bir şekilde boşaltmak için temizleyiciyi dikey olarak çıkarmalısınız.


FİLTRE TEMİZLİĞİNİ YAPIN

Filtre kapağı tutamağını tutun, bastırın ve açın.

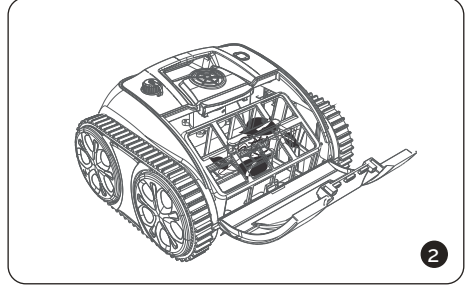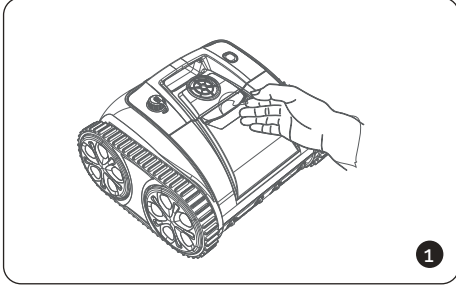


Not:


1. Üst kapağı açarken cihazın gücünün kapalı olduğundan emin olmalısınız.
2. Filtre sepetini kurutmadan önce temizlemeniz gerekir.

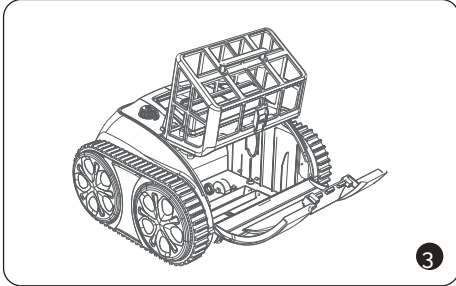

Filtre sepetini çıkarın.

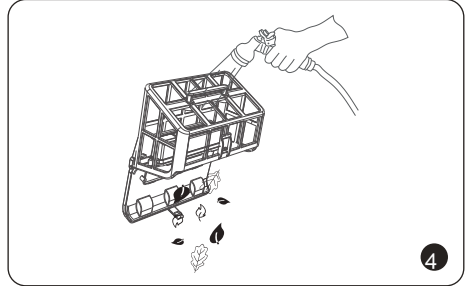

Tüm kalıntıları boşaltın ve temiz suyla durulayın.

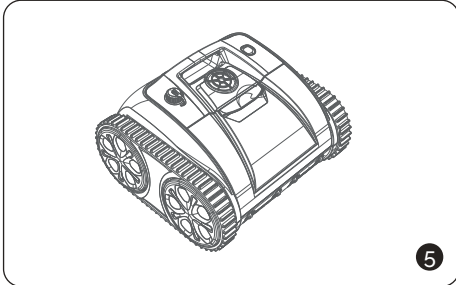

Duruladıktan sonra filtre sepetini süpürgeğin içine koyun ve kapağı kapatın.

CİHAZ ÖZELLİKLERİ

Model	Goodrob Pro
Havuz Büyüklüğü	200 m ² kadar zemin içi havuzlar
Derinlik	9.8ft (3m)
Cihaz ölçüsü	14.6(L)*14.1(W)*9.4(H) inches/372(L)*360(W)*240(H) mm
Ağırlık	16.53lbs (7.5Kg)
Çalışma Süresi	Max. 110 dk
Şarj Süresi	2-3 saat
Voltaj	10.8V
Güç	65W
Şarj Cihazı Girişi	100-240V, 50-60Hz
Şarj Cihazı Çıkışı	12.6V/5A
Pil Kapasitesi	9200mAh
Filtre Yoğunluğu	180µm
Akış Hızı	10 m ³ /H
Hareket Hızı	65 ft/min (19.8 m/min)
Su Direnci	IPX8
OTA Güncellemeleri	Mevcut
Uygulama Bağlantısı	Mevcut

SINIRLI GARANTİ

- 1.Piyasadaki tüm Goodrob havuz temizleyicileri denetlenmiş ve yerel yasalara göre satılmak üzere lisanslanmıştır.
2. Akü, motor ve PCB için garanti süresi satın alma tarihinden itibaren iki (2) yıldır. Filtre sepeti, fırça, tekerlekler vb. dahil olmak üzere sarf malzemeleri garanti kapsamı dışındadır.
3. Garanti yalnızca orijinal alıcılar için geçerlidir ve yeniden satış ve diğer her türlü transfer için geçerli değildir.

4. Ünitede yanlış kullanım, yetkisiz onarım veya demontajdan kaynaklanan her hangi bir hasar Good-rob'un garantisi kapsamında değildir.
5. Garanti süresi içinde herhangi bir talep veya o narım için sipariş numarası veya kaydı sunulmalıdır.

CİHAZIN BAKIMI NASIL YAPILIR

İyi performansı korumak için temizleyicinizi saklama adımlarını izlemelisiniz.

- a) Cihazın gücünün kapalı olduğundan emin olun
- b) Temizleyiciyi ve filtre sepetini kurutun
- c) Aküyü tamamen şarj edin
- d) Temizleyiciyi serin ve havalandırılan bir yerde, doğrudan güneş ışığından, ısı kaynağından, dondan ve sıkımadan uzakta, ortam sıcaklığı 5°C / 41 °F and 45°C / 113°F. arasında olacak şekilde saklayın.
- e) Optimum pil ömrü sağlamak için temizleyiciyi her üç ayda bir şarj edin.

Not:

Cihazınız uzun süreli düşük pil ömründen sonra çalışmıyorsa, lütfen yardım için satış sonrası ekibiyle iletişime geçin. Güvenliğiniz için, yetkiniz olmadan sökmeye çalışmayın.

SSS & SORUN GİDERME

- S:** Temizleyici hangi havuz şekilleri ve yapı malzemeleri için uygundur?
- C:** Makine dikdörtgen, oval veya düzensiz şekillerdeki yer altı havuzlarına uygulanabilir.
- S:** Yüzme havuzundaki basamaklar, sıg su alanları, kanallar, eğimler vb. engeller çalışmayı etkiler mi?
- C:** Makine basamaklara, kanalizasyona ve sıg su alanlarına tırmanabilir. Yukarıdaki engeller temizleme yolunu etkileyebilir, ancak makinenin çalışmasını etkilemez.

Temizleyiciyi kullanırken aşağıdaki durumlarla karşılaşırsanız, tabloyu kontrol edebilir ve bunları kendiniz çözebilirsiniz.


Not:

Tablodan bir çözüm bulamazsanız, lütfen satış sonrası ekibiyle iletişime geçin.

No.	Sorunlar	Detay	Olası Nedenler	Önerilen Çözüm
1	Cihaz çalışmıyor	Sabit kırmızı ışık	Pervane sıkışmış	Pervaneyi kontrol edin ve yabancı maddeleri temizleyin
		Yanıp sönen kırmızı bir ışık	Motor koruması	Yeniden başlatın
		Yanıp sönen kırmızı bir ışık	Cihazın suya sokulmaması veya havuz suyunun çok sıg olması	Yeniden başlatın ve hemen havuza koyun. Su derinliğinin 0,5 m'nin üzerinde olduğundan emin olun.
		Sürekli yanan sarı ışık	Pil zayıf	Cihazı tamamen şarj edin ve yeniden başlatın
2	Şarj edilemiyor	Şarj cihazı ışığı yanıp söndü	Zayıf temas	Şarj cihazının fişini yeniden takın
3	Duvarlara Tırmanmama		Kaygan yapı malzemeleri	Yapışkan blokları yapıştırın
			Çok kirli su	Filtre sepetini temizleyin
4	Anormal duvar tırmanışı	Yavaşça tırmanıyor	Filtre sepeti tıkanmış	Filtre sepetini temizleyin
		Duvarın dibine çökmek veya su üzerinde yüzmek	Emilen hava	Çubuk denge ağırlığı
			Filtre sepeti tıkanmış	Filtre sepetini temizleyin
5	yalnızca parça alanını temizleyin ve yapamazsınız havuzun tamamını temizleyin		Yanlış temizleme modu	Uygulamaya bağlanın ve uygun bir temizleme modunu yeniden seçin
			Ürün yazılımı en son değil	Uygulamaya bağlanın ve firma yazılımını güncelleyin
6	zemindeyken ön tarafı yukarı bakacak şekilde		Filtre sepeti tıkanmış	Filtre sepetini temizleyin
7	Temizleme yolunu ayarlandığı gibi temizlemeyin		Karşılaşılan Engeller	Filtre sepetini temizleyin
	su giderlerinde sıkışma		Drenaj yüksekliği 3 cm'den fazla	Makinenin engelden uzaklaşmasına yardımcı olun
	Uygulamaya bağlanılamıyor		Cihaz gücü off	Yeniden başlat
8	Cihaz havuzdayken APP bağlanamaz		Mevcut değil	Cihazı kıyıya bağlayın

goodrob pro

Goodrob Daha İyi Süpürür!

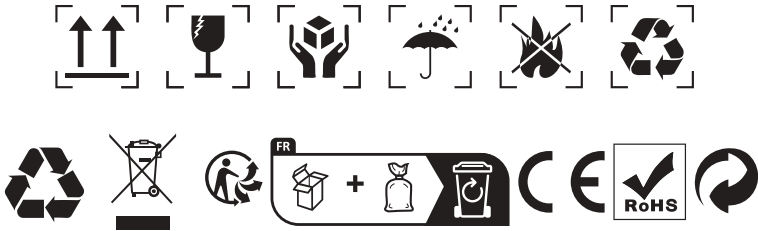

**NETA
HAVUZ**

Manufacturer of pool equipments in Turkey
netahavuz.com

 /neta-havuz

 /neta.pool

 /NetaHavuzTürkiye


 /netahavuz

 /NetaHavuzTurkey



ROBOTIC POOL CLEANER USER MANUAL

CORDLESS, ROBOTIC POOL CLEANER

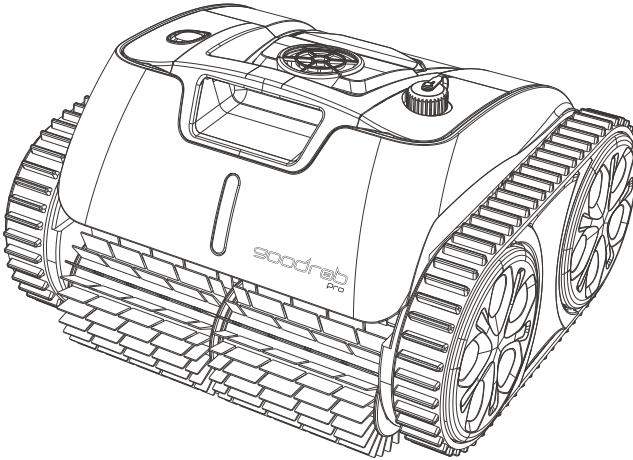

goodreb
Pro

bir NETA markasıdır.
is a HAVUZ brand.



Read through the entire manual before running your new robotic pool cleaner,
and keep this manual handy for your reference.

Read the manual carefully before you use the cleaner. Your safety is the most important thing. Please read through and operate the device as per instructions, Polarbots is not held liable for any loss or injury caused by improper use.

Warning

- Failure to operate the device as per the warnings can result in serious injury, electrocution or death.
1. Use only the accessories recommended or sold by Polarbots.
 2. Dry the charging port after each cleaning. Humidity charging socket may cause a electric shock.
 3. Do not charge the cleaner when it is running (the indicator is on).
 4. Use only the original and authorized power charger. Avoid charging any other devices with this charger. Improper use may result in overheating or corrosive liquid leakage from the battery.
 5. Make sure the electrical outlet is protected by a ground fault circuit interrupter (GFCI) and an earth leakage interrupter (ELI).
 6. Do not use a cord-damaged charger to avoid any electrical shock.
 7. Do not try to use extension cord to connect the charger.
 8. Never allow children to ride on the cleaner or play with it as a toy.
 9. Do not allow child to operate or maintain the device.
 10. Do not enter the pool when the cleaner is working in it.
 11. Never expose or charge the device in flammable environments.
 12. Only licensed professionals can disassemble the sealing parts of the cleaner.
 13. Do not operate the cleaner while pool filter is running.


Caution

- Failure to operate the device as per the warnings can cause a damage to the device or personal damage.
1. Charge the unit before first use.
 2. Do not over charge the cleaner, which will reduce the battery life.
 3. Charge the cleaner prior to being stored for a long time (over 6 months) to main tain an optimal battery life.
 4. Remember to wash and clean the filter basket after each use.
 5. Store the cleaner in a cool and ventilated place, away from direct sunshine or any heat source.
 6. Use only the pool cleaner in the following water conditions:

Chlorine	Max 4 PPM
pH	7.0 - 7.8 PPM
Temperature	41 - 95 °F (5 - 35 °C)
NaCl	Maximum = 5000 PPM


NANOOK AT A GLANCE

Product External Overview

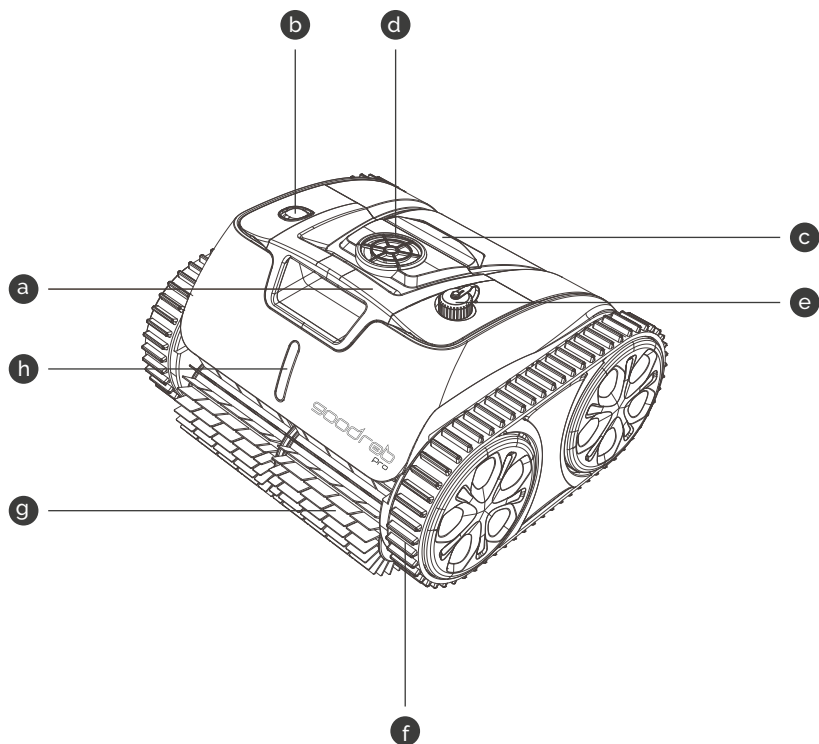

- a** Handle
Remove and transport the device with it
- b** on/off Button
Turn on/ turn off the device
- c** Filter Cover Handle
Hold it and press the edge to open the cover
- d** Pump
Suck debris and pump out water through the window
- e** Charging Port
Connect the charger
- f** Track
Enhance device's capability in climbing walls and various obstacles
- g** Scrubbing Brush
Knock loose all dirt and roll them all into the device
- h** LED Indicator
Different light colors to indicate device status

Product Internal Overview

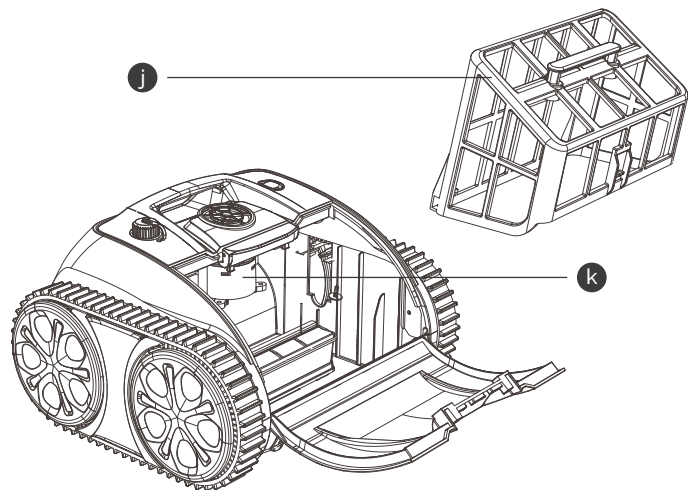

j Filter Basket





Store collected dirt and debris, need be washed after each use.

k Sealed Part

Important components are sealed there. For your safety, do not try to disassemble it without authorization.

Do not operate the device when the top cover or scrubbing brushes are broken.
If there is any liquid leakage from the sealing part, stop charging or running the device.


Packing List

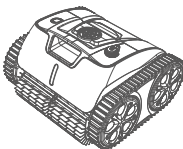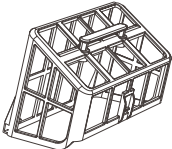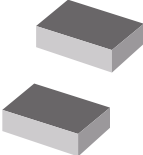 Device x 1	 Balance Weight x 2	 Filter Basket x 1	 Adhesive Floating Block x 2
 User Manual x 1	Quick Start Guide x 1	 Charger x 1	 Hook x 1

GET STARTED

Charge your new Nanook

The device has a lithium-ion rechargeable battery, and you need to charge the battery before first use and when the battery is low. Connect your device to a power outlet using the included cable and adaptor.

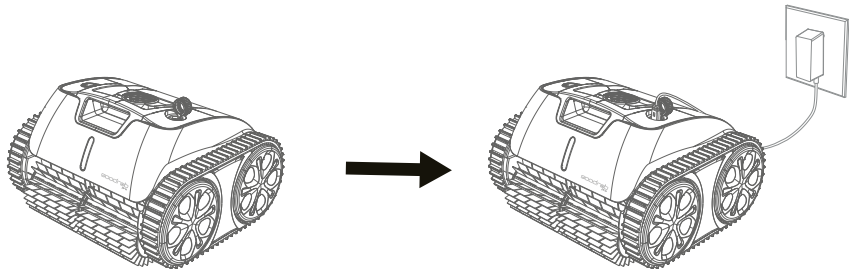

- For your important safety, you need to double check the device is powered off and charging socket is dry before charging.
- For reducing fire risk, keep your device and adaptor away from direct sunshine or water when charging.

Note:


1. When charging ,you should ensure your device at least 3m (appr. 10ft) away from the edge of the pool.
2. The best charging environment is temperature at 32°F -95°F (0°C -35°C), RH at 5%-95%.

The adaptor has an indicator, it will display green light and red light to tell you battery is full or not.


Color	Indication
 Charging	Charging in Progress
 Charging Complete	Battery is full

Setup your new Nanook

You can turn on the device by pressing the on/off button. The LED indicator on the front will display a solid blue when the device is on.

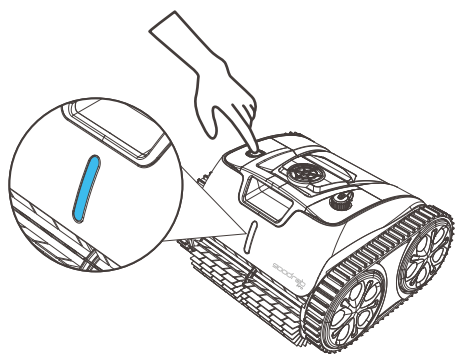

Below is the indication of the LED lights, you may refer it to know different device status.

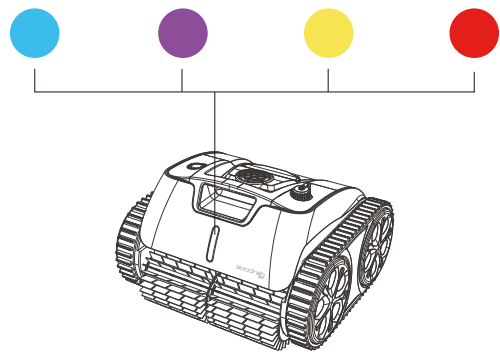


LED Light	Indication	Status
	Solid	Power On
	Flashing	Under working
	Solid	Connecting to App
	Flashing	Low battery or under self-parking in the pool
	Breathing (bright to dim)	Self-parking completion
	Solid or flashing	Fault

Note:


1. When yellow light flashing ,you should remove your device out of water and charge it.
2. If red LED light is on, you can find solution from trouble shooting in this manual or call for service.

Run your new Nanook


Turn on the device, hold the handle of the cleaner and put it into the pool vertically.

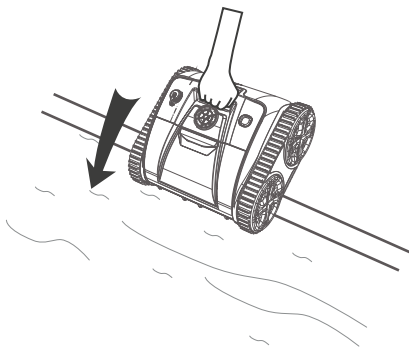


Let it sink down to the floor to empty trapped air inside

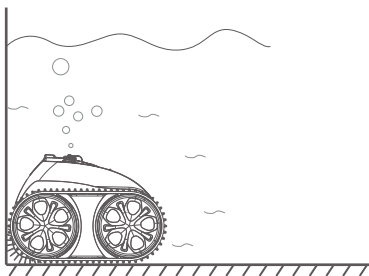**Note:**


To achieve an optimal cleaning performance, you should ensure the water depth of the pool is at least 19.5 in (50 cm) high from the top of the device.

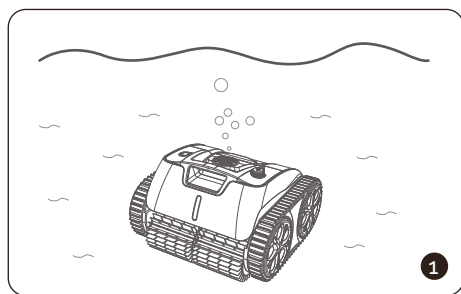


About 20 seconds of auto calibration on the floor, the indicator light will turn flashing blue. The cleaner is ready to clean.

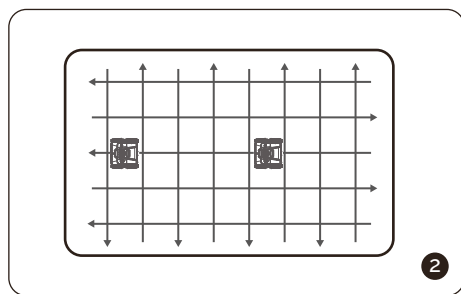


The cleaner begins to clean walls, floor and waterline as default or your set.

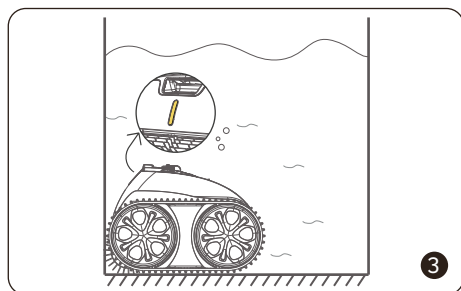

The device will automatically move to stop by the edge of wall when finishing cleaning or battery low.

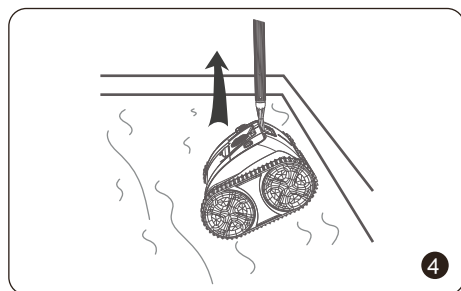



You can insert the included hook into a pool rod and lift the cleaner out of the pool.

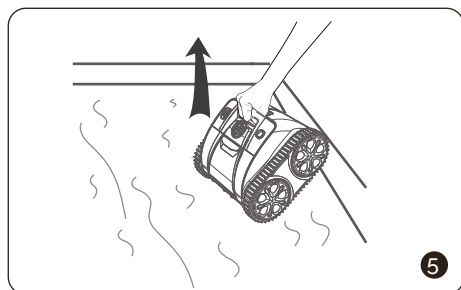

You should take the cleaner out vertically to drain inside water out quickly.


DO A FILTER CLEANING

Hold the filter cover handle, press and open it.

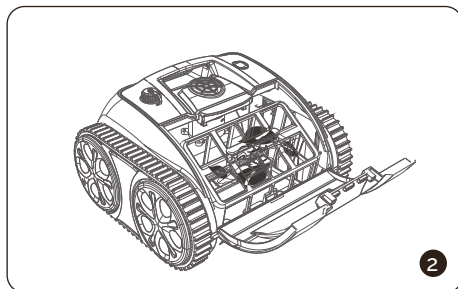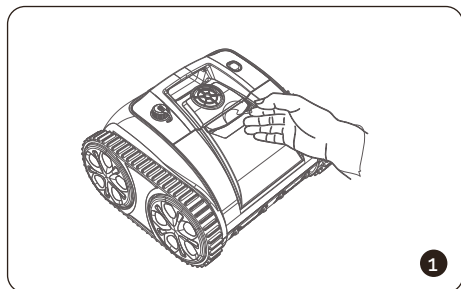


Note:


1. You should ensure the device is power off when open the top cover.
2. You need to clean the filter basket before being dry.

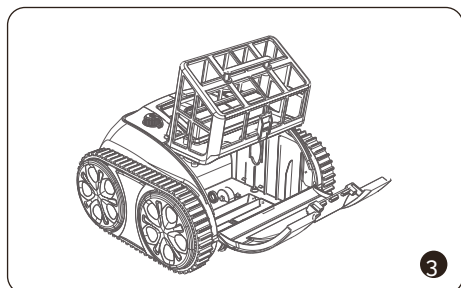

Take out the filter basket.

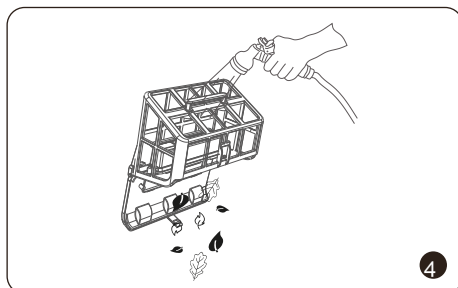

Empty all debris and rinse it with clean water.

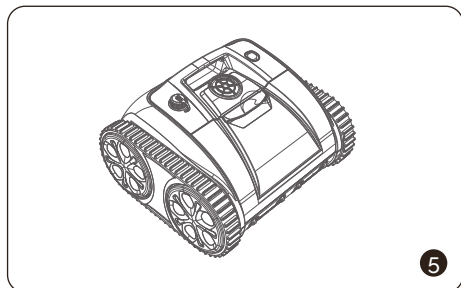

After rinsing, put the filter basket into the cleaner and close the cover.

DEVICE SPECIFICATION

Model	Goodrob Pro
Pool Size	Up to 2150 sq. ft (200 sq. m) in-ground pools
Depth	9.8ft (3m)
Device Dimension	14.6(L)*14.1(W)*9.4(H) inches/372(L)*360(W)*240(H) mm
Weight	16.53lbs (7.5Kg)
Runtime	Max. 110min
Charging Time	2-3 hours
Voltage	10.8V
Power	65W
Charger Input	100-240V, 50-60Hz
Charger Output	12.6V/5A
Battery Capacity	9200mAh
Filter Density	180µm
Flow Rate	10 m³/H
Moving Speed	65 ft/min (19.8 m/min)
Water Resistance	IPX8
OTA Updates	Available
App Connection	Available

LIMITED WARRANTY

1. All Goodrob pool cleaners in the market have been inspected and licensed to be sold as per local laws.
2. The warranty duration for battery, motor and PCB is two (2) years from the purchasing date. Consumable parts, including filter basket, brush, wheels etc.,are beyond warranty.
3. The warranty apply only to original buyers, and not valid to resale and any other kinds of transfer.

4. Any damages to the unit caused by improper use, unauthorized repair or disassembly are not covered by Goodrob' warranty.
5. The order number or record must be presented for any claim or repair within the warranty period.

HOW TO MAINTAIN YOUR DEVICE

You should follow the steps to store your cleaner to maintain good performance.

- a) Ensure the device is power off
- b) Dry out the cleaner and filter basket
- c) Fully charge the battery
- d) Store the cleaner in a cool and ventilated place, away from direct sunshine, heat source, frost and squeezing with an ambient temperature between 5°C / 41 °F and 45°C / 113°F.
- e) Charge the cleaner every three months to ensure an optimal battery life.

Note:

If your device do not work after a long-term low battery life or being off, please contact after-sale team for help. For your safety, do not try to disassemble it without authorization.

FAQ & TROUBLE SHOOTING

Q: What pool shapes and construction materials is the cleaner suitable for?

A: The machine can be applied to rectangle, oval, or irregular shapes of in-ground swimming pools. Applicable construction materials include PVC, cement and other high friction materials. (Slippery materials such as tiles, mosaics, and acrylic may not work well)

Q: Will obstacles such as steps, shallow water areas, drains, slopes etc. in the swimming pool affect the running?

A: The machine can climb steps, drains, and shallow water areas. The above obstacles may influence its cleaning path, but will not affect the operation of the machine.

If you encounter the following situations when using the cleaner, you can check the table and solve them by yourself.


Note:

If you can not find a solution from the table, please contact after-sale team.

No.	Issues	Details	Possible Causes	Suggested Solution
1	Device does not work	A solid red light	Impeller is stuck	Check the impeller and clean foreign
		A flashing red light	Motor protection	Restart
		A flashing red light	Not put the device into the water or the pool water is too shallow	Restart and put it into the pool immediately. Be sure the water depth is over 0.5m.
		A breathing yellow light	Battery low	Fully charge the device and restart
2	Unable to charge	Charger light flashes	Poor contact	Re-plug the charger
3	Do not climb walls		Slippery construction materials	Stick adhesive blocks (Contact after-sale team for instruction)
			Too dirty water	Clean the filter basket
4	Abnormal wall climbing	Climbing slowly	Filter basket blocked	Clean the filter basket
		Sinking down away from wall or floating on the water	Intake air	Stick balance weight (Contact after-sale team for instruction)
			Filter basket blocked	Clean the filter basket
5	only clean part area and cannot clean the entire pool		Wrong cleaning mode	Connect to the App and re-choose a suitable cleaning mode
			Firmware not latest	Connect to the App and update the firmware
6	front side up when on the floor		Filter basket blocked	Clean the filter basket
7	Do not clean as set cleaning path		Encounter Obstacles	Clean the filter basket
	stuck at water drains		Drain height is over 3cm	Help the machine away from the obstacle
	Unable to connect to the App		Device power off	Restart
8	The APP cannot be connected when the device is in the pool		Not available	Connect the device on the shore

goodreb pro

Sweeps Better



**NETA
HAVUZ**

Manufacturer of pool equipments in Turkey
netahavuz.com

 /neta-havuz

 /neta.pool

 /NetaHavuzTürkiye

 /netahavuz

 /NetaHavuzTurkey